

## **USER MANUAL**

This lock has two modes: Private mode & Public mode.

### **1. Default settings**

Default mode: private mode

Default master password: 12345678, default user password: 1122

Password length: master password 8 digits; user password 4-15 digits.

### **2. Instruction under Private Mode (the lock is in normal “closed” state )**

**a.** How to open the door:

Input master password or user password to open the door.

Eg: input 12345678 or 1122 to open the door

**b.** How to change master password:

Master password # 1 # new master password (8 digits) # new master password #

Eg: 12345678 # 1 # 88888888 # 88888888 #, new master password is 88888888

**c.** How to change user password:

Master password # 8 # new user password # new user password#

Eg: 12345678 # 8 # 1357 # 1357 #, new user password is 1357

**d.** How to delete user password: input master password # 0 #

**e.** How to change to Public Mode: input master password # 7 #

### **3. Instruction under Public Mode (the lock is in normal “open” state )**

**a.** How to change master password

Same as step A-1

Master password # 1 # new master password (8 digits) # new master password #

Eg: 12345678 # 1 # 88888888 # 88888888 #, new master password is 88888888

**b.** How to add temporary password:

Temporary password (4-15 digits) # temporary password #

**c.** How to open the door:

Input temporary password or master password to open the door, after door opened, temporary password is invalid.

**d.** How to change to Private Mode: input master password # 7 #

### **4. Restore default mode:**

Press the reset button continuously for 5 times, the lock restores to default state with master password at 12345678, user password at 1122.